



RAE-Sep™ Tube Cartridge For MultiRAE Benzene

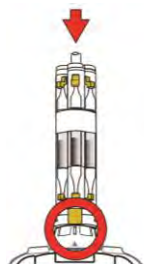

1

Press cartridge into place with "square" button aligned with arrow on inlet

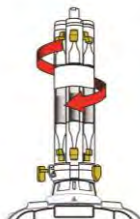


2

Turn clockwise to tighten




3

"Arrow" button should align with arrow on inlet

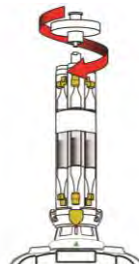

4

Install dust filter

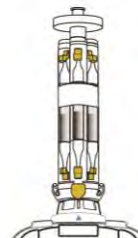

5

Cartridge is now ready for use




WARNING




The RAE-Sep Tube Cartridge should only be used with the MultiRAE Benzene monitor. Using any other monitor, including standard MultiRAE monitors or products from other manufacturers, will result in inaccurate benzene detection or measurement and possible serious injury or death.

NOTE: The RAE-Sep Tube Cartridge is warranted by RAE Systems only for use with the MultiRAE Benzene monitor.

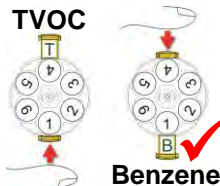


6

Select Benzene mode ("B" is showing)

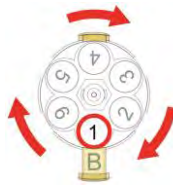


7

Turn top of cartridge to select tube 1

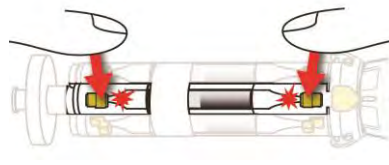

8

Press yellow buttons at both ends of selected tube to break ends

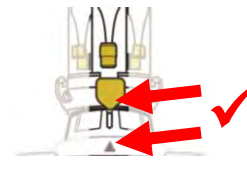

9

Make sure cartridge is firmly in place and arrows are aligned



10

Make sure Benzene mode is selected



RAE Systems by Honeywell
www.raesystems.com

Worldwide Sales Offices

USA/Canada 1.877.723.2878

Europe +800.333.222.44/+41.44.943.4380

Middle East +971.4.450.5852

China +86.10.5885.8788-3000

Asia Pacific +852.2669.0828

P/N: M01-4051-000

Rev A June 2015